andrew james

90 Day pet feeder

Please read the manual carefully and keep the instructions for future reference.

Contents

Control Panel	Page 3
Features	Page 3
Assembly and Disassembly	Page 4
Getting Started	Page 5
General Operation	Page 6
Reviewing the settings	Page 8
Feed Times	Page 9
Voice Recording	Page 9
Feeding Alarm	Page 10
Opening the feed cover	Page 11
Cleaning and Care	Page 11
FAQs	Page 12
Guarantee	Page 13
Contact Details	Page 14

Control Panel Keys

CLOCK –displays clock (current time).
TIMER – switches between pre-set feeding times.
VOL – sets the feeding volume/portion-size.
SET – enters SET mode, and confirms any feeding times you enter and advances to the next setting. Also used with **VOL** key to perform manual feedings.
START – starts the feeding schedule, confirms the clock and feeding-time.
REC – records your personal voice message.
PLAY – plays back your personal voice message.
ON SWITCH – turns the feeder off. For when the feeder will not be used for an extended period of time. Turning this switch off will reset all time and feeding settings.
DAY – sets the number of days to feed.

Control Panel

Features

- 12 or 24 hour clock display.
- Feeds according to your set time.
- Amount of food dispensed is adjustable.
- 6 second personal voice message recorder.
- Personal Voice message calls your pet when its feeding time.
- The 4 Feeding times can be set for any time of day or night.
- D-size alkaline batteries (4pc's required) lasts over 1 year.
- Red LED indicates Low batteries.

Assembly & Disassembly

Assembly

1. Open the food tank and unpack the feeder tray.
2. On a flat surface, line up the pet feeder with the feeder tray.
3. Push the feeder tray into the recess until it snaps in place.

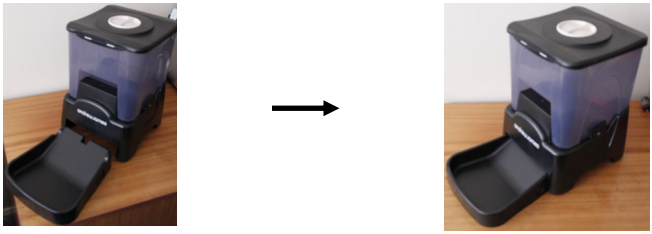

Disassembly

1. Open the spring loaded locks on the sides of the feeder base, using both hands and your thumbs to push down the locks and release the food tank.
2. Remove the food tank from the base.

Note: The springs are very strong so be careful not to let the locks snap back and hurt your fingers.

To re-assemble

1. Line up the food tank with the feeder base.
2. Press the locks out with your thumbs so the food tank can sit onto the feeder base. The locks are spring loaded so be careful not to pinch your fingers.
3. Ensure the locks securely lock onto the food tank.

Getting started

- Open the battery door (under the unit).
- Insert four D-size alkaline batteries into the battery tray. DO NOT use old or cheap carbon batteries.
- Close the battery door and switch on the feeder. The ON switch is next to the battery door (under the unit).
- The feeder will cycle once until **”12:00”** is flashing on the LCD display.
- You now have 90 seconds to set the current time in order for the feeder to work properly. If longer than 90 seconds passes then (1 :07) will be displayed on the LCD. Simply turn the switch to Off, wait 1 minute, then repeat from step 3.

Control Panel

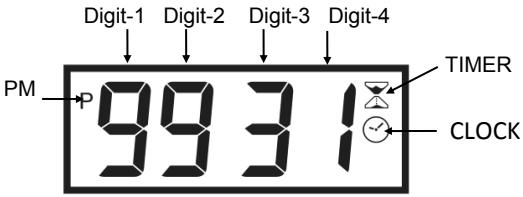

LCD Display

General operation

Setting the Current Time

1. All digits should now be flashing.
2. Press the **CLOCK** key to set the HOUR.
3. Press the **TIMER** key to set the MINUTE.
4. Press the **SET** key once to confirm the time, now the display will show either 12 or 24 to indicate the display mode.
5. Press the **CLOCK** key to change between 12 or 24-hour display mode.
6. Press the **START** key to CONFIRM the clock setup.
7. (1 :07) will be flashing and you must now set the feeding times.

Setting the Feed Time and Number of Feeds per Day

1. (1 07) should now be flashing. Digit-1 is the feeding number (times per day), Digits 3 & 4 are the feeding time (in hours).
2. The display shows the 1st feeding time (1 07) this means the 1st feeding will be at 7am.
3. With (1 07) flashing, press and hold (for 2 seconds) the **SET** key until Digit 3 & 4 start flashing (07).
4. Press the **TIMER** key to set the desired hour for feeding.
5. Press the **SET** key to confirm your setting and proceed to the 2nd feeding time.
6. Repeat step 4 to set the desired hour for the SECOND feeding time.
7. At this point if you want to only feed 2 times per day. Press the **START** key and you're finished.
8. If you wish to feed a 3rd or 4th time each day, do not press the **START** key and repeat from step 4.

Tip: If you pressed the **SET** key a 3rd time, but you did not want to feed 3 times per day, just press the **TIMER** key and then press and hold the **SET** key (for 2 seconds) to start over, remember not to press the **SET** key after the second feeding, press the **START** key to end your number of feedings per day.

Note:

If all four feeding-times have been set, the process will terminate and the schedule will start automatically. The next feeding time will then be displayed.
(If only 1 feeding-time has been set then the feeding-timer display will not change even if you press the **TIMER** key.)

Feeding-times must be set in ascending order otherwise the remaining number of the feeds will not be served.

Setting the Volume/Portion-Size

1. Press the **VOL** key to display feed-volume/portion-size.
2. Press and hold (for 2 seconds) the **SET** key until Digit-4 blinks.
3. Press the **VOL** key to set the desired volume.

   Please Note:

4. A Feed-volume of 1 equals ¼ cup of food, 2 means ½ cup of food, 3= ¾ cups and so on.
5. The number **0** represents **10 portions** which is equal to **2.5 cups.**
6. **Press the START** key to confirm the volume/portion size.

To review the settings

1. Press the **TIMER** key to cycle through and view the feeding times. Only the feeding times per day that are set will be displayed. Digit-1 is the feeding number each day, Digit 3 & 4 are the feeding times (in hours). Example: (1 07)=(1st feeding at 7am).

2. Press the **VOL** key once to view the volume/portion-size and feeding day (s) remaining.

3. Press the **DAY** key to display feeding day(s) remaining.

4. Press the **CLOCK** key once to display the current time, the CLOCK icon will now turn on.

Control Panel

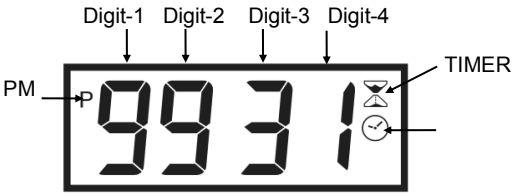

LCD Display

5. If no key is pressed for more than 8 seconds, the display will switch back to show the next feeding time with the timer icon flashing.

Note:

Using the **TIMER** key to cycle through the feeding times will only display the number of feedings you set. The sequence will repeat after the last one is displayed.

Only the 1st feeding time will be displayed if you've set just 1 feeding.

A flashing timer-icon means the feeding-time has not been reached while a solid timer icon means the feeding-time has already passed.

The volume and day display shares the same screen so Digit-1 & 2 are the feeding day(s) remaining while Digit-4 is the Volume/Portion-size.

Setting the Number of Days to Feed

1. Press the **DAY** key and the left side of the LCD shows the number of days your Automatic Feeder will feed for until it stops. The default setting of (0) means the feeder will feed continuously and never stop.
2. To change the number of days to feed, press the **DAY** key then press and hold the **SET** key (for 2 seconds) until the days flash on the LCD.
3. Press the **DAY** key to change the number of days. Hold down the **DAY** key to speed through the numbers.
4. If you set a number of days to feed (1 to 99 days) then at 6am after the last day the feeder Alarm will start beeping.
5. To repeat the same schedule without any changes, just press the **START** key.
6. To feed continuously, set the number of days to 0.

Note:

- When the timer-icon and all the numbers on the LCD display are continuously **ON**, the feeding schedule has started.
- Once a feeding schedule has started, you can force it to end by pressing the **SET** and **START** keys together.

Record Voice Message to be played at feeding times

Press and hold the **REC** key, the Red LED will turn on.

Speak your message. You have up to 6 seconds.

When finished, release the **REC** key.

Play back recorded Voice Message

Press the **PLAY** key.

Your recorded message will now play.

At each Feeding your recorded message will play and repeat 3 times.

Feeding Alarm

1. Your Automatic Pet Feeder has an ALARM (a continuous beeping) to alert you to when your feeding schedule has ended and no more food will be dispensed.
2. The Feeding Alarm will start at 6:00AM the next day to avoid disturbing anyone during the night.
3. You can press any key to stop the alarm.
4. To restart your original feeding schedule, press the **START** key.

Important Notes:

- **Power-on default settings are:**
  Number of Days to Feed=0 days (0=continuous),
  Number of Feedings per Day=2 feedings and Volume/Portion-size=1 (¼ cup).
- The feeder will **vibrate for about 15 seconds** during food delivery to help the unit dispense food more efficiently.
- If you hear **a few beeps (10 in total) and the feeder-drum isn't moving** then the **Tray-Full detector** has been triggered.
  MAKE SURE THE FOOD SLIDE AREA IS CLEAR OF FOOD.
- **Do not use the feeder under strong sun light** as the **Tray-Full detector** can be activated by bright light making the feeder act like the food-tray is full and will stop delivering food.

Note:

When the timer-icon and all the numbers on the LCD display are continuously **ON**, the feeding schedule has started.

Once a feeding schedule has started, you can force it to end by pressing the **SET** and **START** keys together.

To manually feed your pet

- Press the **SET** and **VOL** keys together, once only ¼ cup will be dispensed. The normal schedule and quantity will not be affected.

Opening and closing the food cover

1. To open (Unlock) the food cover Automatic Pet Feeder, rotate the round dial so the ARROW points towards the Open Lock.

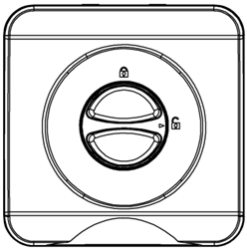

2. To close (Lock) the food cover Automatic Pet Feeder, rotate the round dial so the **ARROW** points towards the **Closed Lock.**

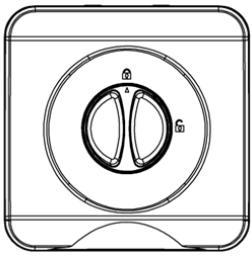

Care and cleaning

When the food tank starts getting dirty and there is a lot of loose food at the bottom of the food tank, you can remove the food cover and food tank for cleaning.

Use a soft damp cloth to clean the feeder base which contains the control panel and batteries. Never get this part wet and do NOT wash with running water.
You can wash the Food Cover and Food Tank in warm soapy water. DO NOT put these parts in the dishwasher or they will be permanently damaged.

FAQ'S

1. The clock can display in either 12 or 24-hour display format
   The **(PM)** icon will show in the afternoon under the 12-hour display mode.
2. The feeding days can be changed at any time but the previous schedule will be replaced and will start from the 1st new feeding day set.
3. The feeding times and feeding-volume can be changed at any time and the new settings will be for the rest of the feeding day/s schedule.
4. Once the schedule has started, the **DAYS** displayed will be reduced by 1 every day at 0:00 (midnight) until the end is reached. It will then revert back to the original number of set **DAYS** and the Feed Alarm will sound. Just press the **START** key to start your original program/settings again.
5. If the timer icon is **OFF** and all numbers are flashing then no feeding schedule has been set.
6. When the timer icon is **ON** and all numbers on the LCD display are not flashing then the schedule has started.
7. When the Clock icon is **ON** the current time is displayed.
8. When the **Red (LOW BATT) light FLASHES**, the batteries are low and must be replaced.
   Change all the batteries as soon as possible. You will have to reprogram all your settings again when the batteries are changed.
9. When the LCD display shows **(Err)**, the food delivery door is not closing properly. You need to remove any food that jams the door.
   1) Switch OFF the Auto Feeder, remove all food, turn your Auto Feeder upside down.
   2) Clean both doors hinges with a soft brush.
   3) After cleaning switch ON the Auto Feeder and refill with food.
10. **Note: You will have to reprogram all your original settings before you can use your feeder again.**
11. Always use the Quick Setup Guide for fast easy programming. If you want more advanced features, use the this Instruction Manual.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic not commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.